

# Alu-Tile with Braas Tegalit


## Mounting instruction supplement

If applying the Alu-Tile in combination with the **Braas Tegalit** concrete tile, then the concrete tile must be reworked. Please reference this mounting instruction supplement in combination with the usual mounting instructions for Alu-Tile!

- ⚠ The work must be precise.  
Approval must be gained from the tile manufacturer.




- 1 Prepare the concrete tile.
  - Remove concrete tile (A).

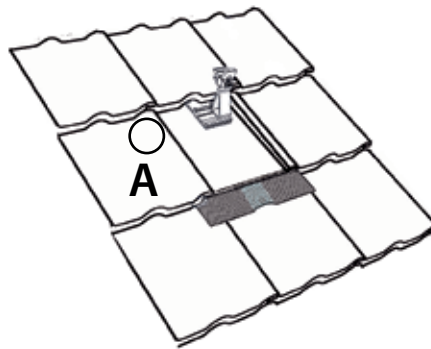

Underside

- 2 Remove the side fins
  - Remove fins using a diamond angle grinder until the seam base is exposed (see image right).

Remove the fin only!  
Do not grind deeper into the tile!

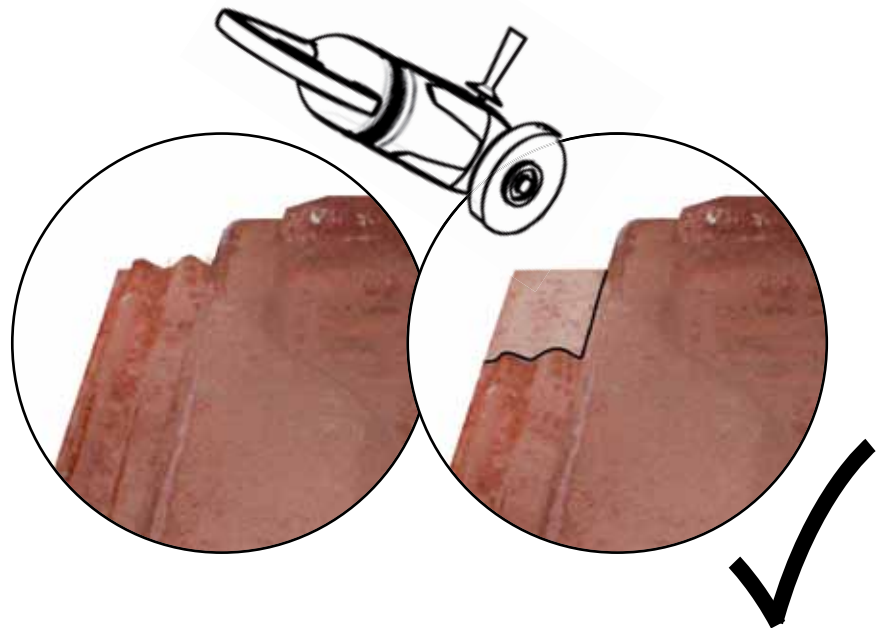

For further information relating to our systems, please visit our website: [www.schletter.eu](http://www.schletter.eu) under Downloads in the Solar section.